MGC 系列 U 盘升级流程

一、下载前	前准备事项					
1、准备一	个 32GB 以下 F	AT32 格式的	IU盘			
2、U 盘内》	新建文件夹,「	中英文都可じ	人(1个文)	件夹可存储一个E	MI 工程/组态)	
如果想要升	十级组态的话则		软件ト载	到U 盐 的文件夹 P	5 (如卜图1 所示), :二、	如果想要升级底层的话需要将
对应的底层	云又作(如 MGCO	70_HM1) 复审	¶到0 盆 根	日末(如下图2月	/「」、	
⇒>∪盘(G:)					
· · · · ·			~			
*	名称] 工程1>					
			U盘(G:) > ⊥程1			
			* ^	名称		
			*	compile		
资料				- compile		
				因 1		
■ > 広中脳 >	U 盔 (E:)					
名称 P MGC0	70 HMI	修改日期 2022/9/19 1	类型 8·44 文件		大小 5 753 KB	
*		2022/07/101			67,00 RD	
*						
~						
				图 2		
二、具体 ⁻	下载流程如下:					
1 占土标	卅茲畄₩\⊤	-月_\下去丁	担武占土	" [》 四标		
1、 点山扒			、住以点山			
! 49 \) 下载T程(D)	P				
	▲ 离线模拟					
	在线模拟	180				
2	◎ 升级					
画面1 1	☑ 底层版本号	Н				
2、点击 U	盘下载,选择	U 盘内的文	件夹后,,	点击下载		
下载				×		
 ○ USB下载 ○ 网络下载 	选择U	l盘里的文件夹	,不是根目:	录		
 下載到U盘 注意:只支持标 强制修改文件系 	:\工程1 准FAT32格式小于32GB以下 统为FAT32不支持	的U盘;大于32GB不支	μŧ,	浏览		
			- /			
□ 法险压由报警	□ 法险压由料炉	0%		影响提		
□ 福林历史报書	□ 肩环/J史劉雄 □ 自动升级(U盘)	ビー 7月PホロC 力 安江店	下载	关闭		

3、HMI 正常启动状态下插入准备好的 U 盘,HMI 检测到 U 盘的组态文件或者底层文件会弹出一个升级选择窗口,此 时可以点击对应的工程问件进行升级(升级组态时如果有弹出输入密码,一般是默认 123465,底层需要输入密码, 默认和组态更新密码一样),升级完成后 HMI 将自动重启。

